

inverter.com

Solar Pump Inverter Manual



WARNING

- Risk of injury and electric shock
- Do not attempt to repair or modify the inverter
- Connect ground cables according to the instructions
- Do not touch the inverter when it is powered on
- Do not touch the inverter when it is hot

Preface

Thank you for purchasing the solar frequency inverter .

Features:

- MPPT algorithm (maximum power point tracking of PV cells) efficiency > 99%.
- Solar battery working point voltage can be manually or automatically MPPT tracking.
- All weather operation (automatic speed adjustment).
- Allows for sunrise “wakeup” and sunset “sleep” functionality.
- Offers 35 types of protection functions..
- Offers auto sleep functions such as (dry run /low frequency/low power/low voltage).
- Main protection Functions Include: overload, over current, over voltage, under voltage, short circuit, dry pumping etc.
- Output frequency range: V/F(0~3000hz); vector control(0~300HZ).
- Overload capacity: 60s with 150% of rated current, 3s with 180% of rated current.
- Speed accuracy: $\pm 0.5\%$ (SVC); $\pm 0.02\%$ (VC).
- Pulse setting input: 0Khz~100Khz.
- Supports remote control, , terminal control, analog control and RS232/RS485 ModBus communication protocol.

When unpacking, please verify the following:

1. Ensure the package contains the solar inverter as well as a user manual. Ensure the nameplate model of the solar inverter aligns with what was ordered.
2. Verify that the solar inverter was not damaged during transportation.

Contact the manufacturer or local supplier / distributor immediately regarding any discrepancies or concerns.

Notice for First-time Users

For first time users of this product, please read the manual carefully. In case of any doubt regarding any of the functions or product performance, please contact the relevant technical support personnel.

Due to the continuous improvement of the solar inverter product range, this document will be updated as and when required.

The solar inverter product complies with the following international standards.

- CE certification.
- IEC/EN61800-5-1: 2003 Variable speed electric drive system safety requirements.
- IEC/EN61800-3: 2004 Variable speed electric drive system, Part 3: The Electro Magnetic Compatibility (EMC) Standards of Product and its specific testing methods.

Contents

1. Safety Information and Precautions	3
1.1 Safety Information.....	3
2. Product Information	5
2.1 Model and Technical Specifications	5
2.2 Installation dimension.....	6
2.2.1 Solar inverter appearance and installing dimension(mm)	6
2.2.2 Appearance and installation dimension of external keypad (keypad tray).....	7
3. Installation of Frequency Inverter	8
3.1 Installation environment	8
3.2 Installation direction and space	8
3.3 Sketch and Description of Main Circuit Terminals	9
3.3.1 Function and description of Main Circuit Terminals	9
3.4 Control Circuit and Main Circuit Terminals Description	9
3.4.1 Control Circuit and Main Circuit Wiring	9
3.4.2 Control Circuit Terminal Layout	10
3.4.3 Description of control circuit terminals	10
3.5 Collection Diagram For Different Motor	11
3.5.1 The wiring of water-level automatic control	12
4 Operation and display	14
4.1 Instruction of operation and display.....	14
4.2 Function Code Table.....	15
5. Description of Function Codes	20
F0: Basic Function Parameters Group.....	20
F1 Motor Parameter	23
F4 Input Terminals	24
F9 Faults and protection parameters.....	25
FE Solar water pump control parameters.....	26
FP User password parameters	29
6. Fault Diagnosis and Solution	30
6.1 Fault Alarm and Countermeasures.....	30
Appendix I. Modbus communication protocol	32
I. About Protocol.....	32
II. Application Methods.....	32
III. Bus structure	32

1. Safety Information and Precautions

Notices in this manual are graded based on the degrees of danger as follows:



Danger: Indicates that failure to comply with the notice will result in severe personal injury or even death.



Warning: Indicates that failure to comply with the notice will result in personal injury or property damage.


Read this manual carefully to ensure a thorough understanding regarding installation, commissioning, operation and maintenance of this product. The manufacturer and local supplier /distributor will assume no liability or responsibility for any injury or loss caused by improper operation.

1.1 Safety Information



Danger

- Do not use with damaged or missing components. Failure to comply may result in personal injury.
- Please use with electric motor with a B insulation class or higher. Failure to comply may result in personal injury.
- Install the solar inverter to incombustible objects such as metal and keep it away from combustible materials. Failure to comply may result in a fire.
- Wiring must be performed only by qualified personnel as per instructions described in this manual. Failure to comply may result in unexpected accidents.
- A circuit breaker must be used to isolate the power supply from the solar inverter. Failure to comply may result in a fire.
- Ensure that the power supply is cut off before wiring. Failure to comply may result in electric shock.
- Connect the solar inverter to ground according to standards. Failure to comply may result in electric shock.
- Cover the solar inverter properly before power-on to prevent electric shock.
- Do not open the solar inverter's cover after power-on to prevent electric shock.
- Do not touch the solar inverter or its peripheral circuit with wet hands to prevent electric shock.
- Do not touch the terminals of the solar inverter (including the control terminals). Failure to comply may result in electric shock.
- Do not touch the U, V, W terminal or motor connection terminals when solar inverter automatically does safety testing for the external high-voltage electrical circuit. Failure to comply may result in electric shock.
- Maintain a safe distance from equipment after selecting the start function. Failure to comply may result in personal injury.
- Do not touch the fan or the discharging resistor to check the temperature. Failure to comply may result in personal injury.

Signal detection during operation should only be performed by qualified personnel  **Warning:**

- When two solar inverters are installed in the same cabinet, arrange the installation positions properly to ensure adequate cooling.
- Do not drop wire residue or screws into the solar inverter. Failure to comply may result in damage to the

solar inverter.

- Never connect the power supply cables to the output terminals (U, V, W) of the solar inverter. Failure to comply will result in damage to the solar inverter.
- Make sure that all the connecting wires comply with the EMC and safety standard requirements in the region. Use wire sizes as recommended in the manual. Failure to comply may result in accidents.
- Never connect the braking resistor between the DC bus terminals (P+) and (P-). Failure to comply may result in a fire.
- Do not perform voltage resistance tests on any parts of the solar inverter - these tests have been done in the factory. Failure to comply may result in accidents.
- All peripheral devices must be connected properly as per the instructions described in this manual. Failure to comply will result in accidents.
- Note the danger during the rotary running of motor when check the parameters. Failure to comply may result in accidents.
- Do not change the factory default settings of the solar inverter. Failure to comply may result in damage to the solar inverter.
- Prevent objects from falling into/onto the solar inverter while it is running. Failure to comply may result in damage to solar inverter.
- Do not start/stop the solar inverter by turning the contactor ON/OFF. Failure to comply may result in damage to the solar inverter.

2. Product Information

2.1 Model and Technical Specifications

GK330 - 7D5- SP3

GK330	Solar Inverter
-	Products Type: PV use
SP3	Voltage range: SP1: DC 250~400V to single-phase AC 220V SP2: DC 250~400V to 3-phase AC 220V SP3: DC 350~750V to 3-phase AC 380V
7D5	Adaptable motor: 7D5: 7.5KW

Table 2-1 Models and technical data

Model	GK330--XXX-SP2					GK330-XXX-SP1				
	D75	1D5	2D2	4D0	5D5	D75	1D5	2D2	4D0	5D5
Rated power/KW	0.75	1.5	2.2	4	5.5	0.75	1.5	2.2	4	5.5
Min. DC voltage/V	120									
Max. DC voltage/V	480									
Recommended MPPT range /V	250~400									
AC output	AC 3-phase 220V					AC single-phase 220V (U, V)				
Output current/A	3.8	5.1	9	13	25	3.8	5.1	9	13	25
Output frequency	0~50/60Hz									
Power factor	>0.99									
Communication mode	RS485 communication									
Protection class	IP20									
Ambient temperature	-10°C~ +40°C (for ambient temperatures between 40°C~50°C, use derated power)									
Storage temperature	-20°C ~ +60°C									
Humidity	Smaller than 95% RH, non-condensation									
Cooling	Forced Air cooling									
Altitude	Lower than 1000 m									
Humidity	Less than 95% RH, without condensing									
Vibration	Less than 5.9 m/s ² (0.6 g)									

Table 2-2 Models and technical data

Model [GK330-XXX-SP3]	D75	1D5	2D2	4D0	5D5	7D5	011	015	018	022	030	037	045
	055	075	090	110	132	160	200	220	250	280	315	355	400
Rated power/KW	0.75	1.5	2.2	4	5.5	7.5	11	15	18.5	22	30	37	45
	55	75	90	110	132	160	200	220	250	280	315	355	400
Min. DC voltage/V	280												
Max. DC voltage/V	750												
Recommended MPPT range /V	350~750												
AC output	AC 3-phase 380V												

Output current	2.1	3.8	5.1	9	13	17	25	32	37	45	60	75	91
	112	150	176	210	253	304	377	426	465	520	585	650	725
Output frequency	0~50/60Hz												
Power factor	>0.99												
Communication mode	RS485 communication												
Protection class	IP20												
Ambient temperature	-10°C~+40°C (for ambient temperature between 40°C~50°C, use derated power)												
Storage temperature	-20°C ~ +60°C												
Humidity	Smaller than 95% RH, non-condensation												
Cooling	Forced Air cooling												
Altitude	Lower than 1000 m												
Humidity	Less than 95% RH, without condensing												
Vibration	Less than 5.9 m/s ² (0.6 g)												

2.2 Installation dimension

2.2.1 Solar inverter appearance and installing dimension(mm)

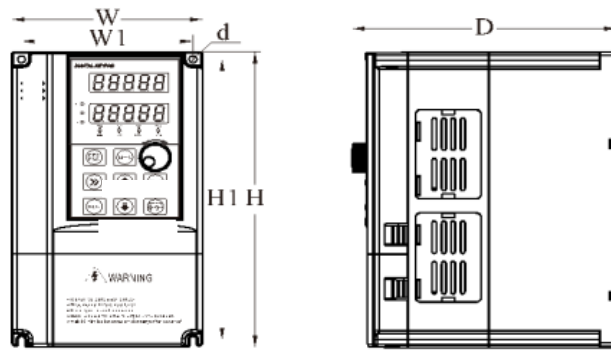


Diagram 2-2 Appearance and installing dimension (Plastic housing structure)

Matching inverter		Appearance and installing dimension (Unit: mm)					
GK330-XXX-SP1/SP2	GK330-XXX-SP3	W	W1	H	H1	D	d
0.75~2.2kW	0.75~5.5kW	120	108	205	195	166	Φ4.5
4~5.5kW	7.5~11kW	162	148	250	238	191	Φ5.5
-	15~22kW	223	207	323	307	207	Φ5.5
-	30~37kW	275	170	435	410	235	Φ8
-	45~55kW	300	220	470	435	258	Φ10
-	75~90kW	335	285	490	465	258	Φ10
-	110Kw	410	260	610	575	280	Φ12
-	132~160kW	475	320	720	675	335	Φ12
-	200~280kW	535	360	885	830	370	Φ12
-	315~355kW	535	360	1130	830	370	Φ12
-	400kW	650	360	1300	990	415	Φ12

2.2.2 Appearance and installation dimension of external keypad (keypad tray)

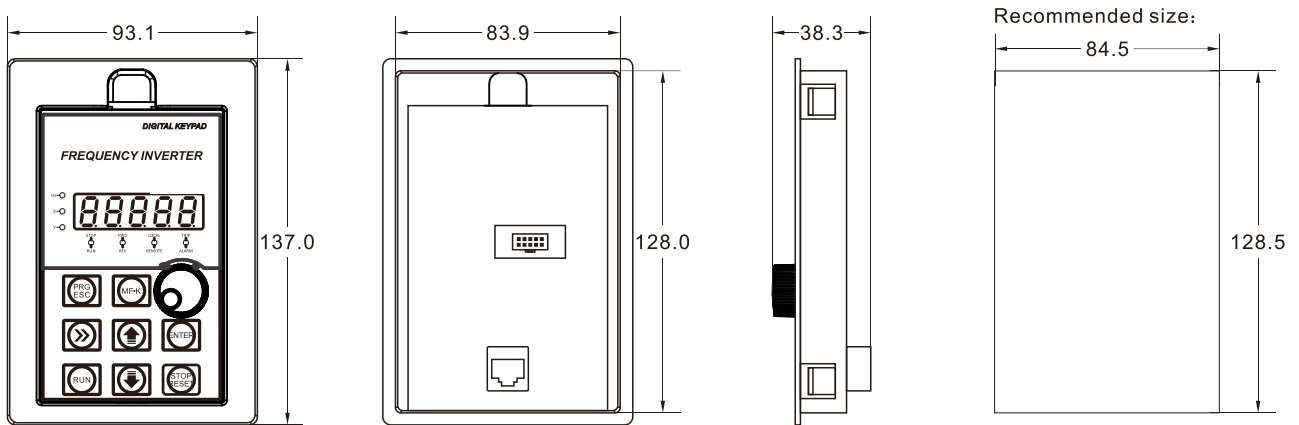


Diagram 2-3 Appearance and installation dimension of external keypad (keypad tray)

3. Installation of Solar Inverter

3.1 Installation environment

1. Environment with indoor vents or ventilation devices.
2. The environment temperature shall be $-10^{\circ}\text{C}\sim 40^{\circ}\text{C}$. If the temperature is over 40°C , but less than 50°C , rather remove the cover of the solar inverter or open the front door of the cabinet to improve heat dissipation.
3. Try to avoid high temperatures and wet environments; humidity should be less than 90% without likelihood of frost deposits.
4. Avoid direct sunlight.
5. Keep away from flammable, explosive and corrosive gas and liquid.
6. Protect against dust, floating fiber and metal particles.
7. Do not install on a place with high vibration. Vibration should not be more than 0.6G. Generally install far away from punching machines, etc.
8. Keep away from any electromagnetic interference source.

3.2 Installation direction and space

To prevent affecting the service life of the solar inverter and reduce its performance, note the installation direction and space requirements and fasten it correctly.

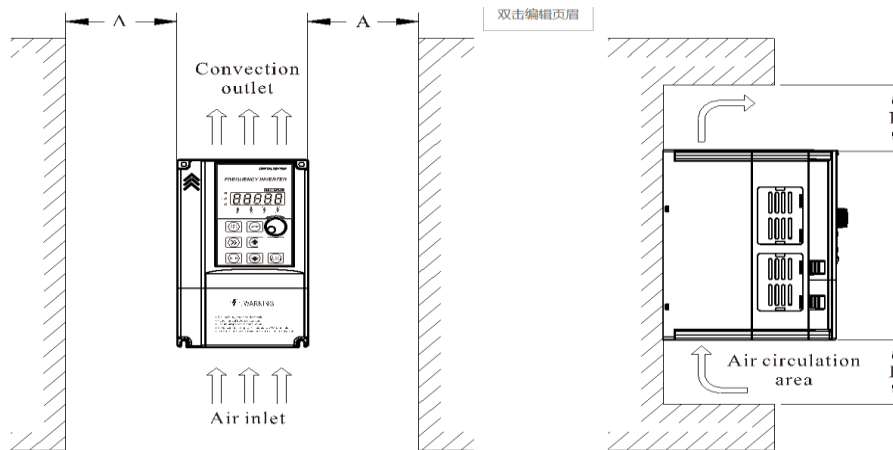


Diagram3-1 Ventilating duct installation dimension diagram of solar inverter

Power class	Installation dimension	
	A	B
$\leq 7.5\text{kW}$	$\geq 20\text{mm}$	$\geq 100\text{mm}$
11kW - 30kW	$\geq 50\text{mm}$	$\geq 200\text{mm}$
$\geq 37\text{kW}$	$\geq 50\text{mm}$	$\geq 300\text{mm}$


Please install the solar inverter vertically to ensure upward heat dissipation and also pay attention to the direction of the solar inverter to avoid inversion.

When installing several units together, please install them side by side, do not install them above each other.


3.3 Main Circuit Terminals

3.3.1 Function and description of Main Circuit Terminals

Power range: 0.75kW~22kW

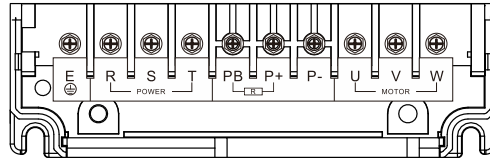

Power range: 30kW~400kW

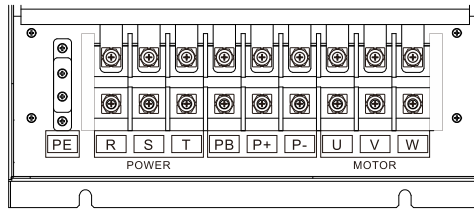

Terminal symbol	Function description
R, S, T	AC power input terminals
P+, P-	DC power input terminals
P+, PB	Braking resistor connection
⊕ or E/PE	Grounding terminal
U, V, W	3-phase AC power output terminals

3.4 Control Circuit and Main Circuit Terminals Description

3.4.1 Control Circuit and Main Circuit Wiring

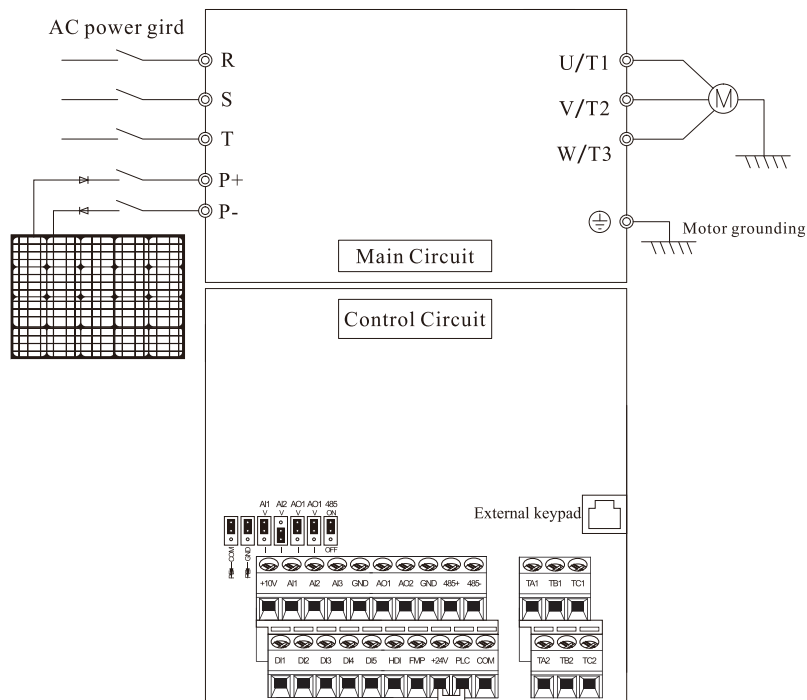


Diagram3-2 Control circuit and main circuit wiring

3.4.2 Control Circuit Terminal Layout

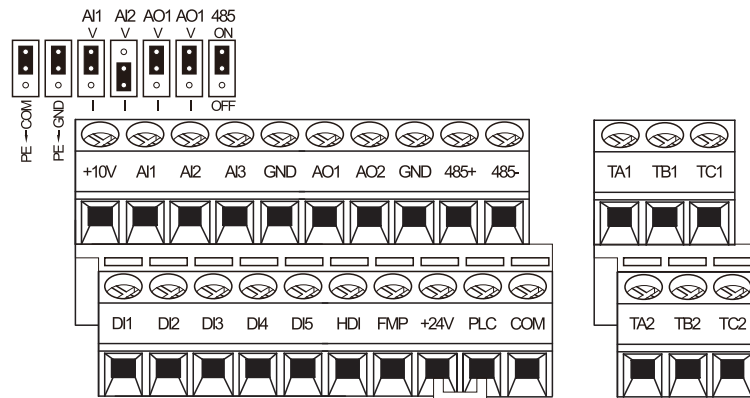


Diagram3-3 Control circuit terminal sketch diagram

3.4.3 Description of control circuit terminals

Type	Symbol	Name	Terminal function description
Power Supply	+10V-GND	External +10V power supply	Provide +10V power supply to external unit. Maximum output current:10Ma Generally, it provides power supply to external potentiometer with resistance range of 1 kΩ ~ 5kΩ
	+24V-COM	External +24V power supply	Provide +24 V power supply to external unit. Generally, it provides power supply to DI/DO terminals and external sensors. Maximum output current: 200 mA
	PLC	External power supply input terminals	It connects with +24V default
Analog input	AI1-GND	Analog input 1	1. Input range: DC 0V~10V/ 0mA~20mA (decided by jumper AI1/AI2 on the control board); AI3: DC -10V~+10V 2. Impedance: 22 kΩ (voltage input), 500 Ω (current input)
	AI2-GND	Analog input 2	
	AI3-GND	Analog input 3	
Digital input	DI1-COM	Digital input 1	1. Optical coupling isolation, compatible with dual polarity input 2.Input Impedance: 2.4 kΩ 3. Voltage range for level input: 9V~30 V
	DI2-COM	Digital input 2	
	DI3-COM	Digital input 3	
	DI4-COM	Digital input 4	
	DI5-COM	Digital input 5	
	HDI-COM	High Speed Pulse Input	Maximum input frequency: 100 kHz
Analog output	AO1-GND	Analog output 1	Voltage or current output is decided by jumper AO1/AO2. Output voltage range: 0V~10 V Output current range: 0mA~20 mA
	AO2-GND	Analog output 2	
	FMP- COM	High Speed Pulse Output	Constrained by function code b4-00 "FMP terminal output mode selection" as the high-speed pulse output, the highest frequency is 100kHz; when use as an open collector output, specifications is the same as DO.
Relay output	TA1-TB1	NC terminal	Contact driving capacity: 250 VAC, 3 A DC 30 V, 1 A
	TA2-TB2		
	TA1-TC1	NO terminal	

Type	Symbol	Name	Terminal function description
	TA2-TC2		
Interface	External keypad interface		Connected to an external keypad
Jumper	AI1/AI2		AI1/AI2 output selection, Voltage or Current output. AI1: voltage output by default. AI2: current output by default.
	AO1/AO2		AO1/AO2 output selection, Voltage or Current output. AI1/AI2: voltage output by default.

3.5 Collection Diagram For Different Motor

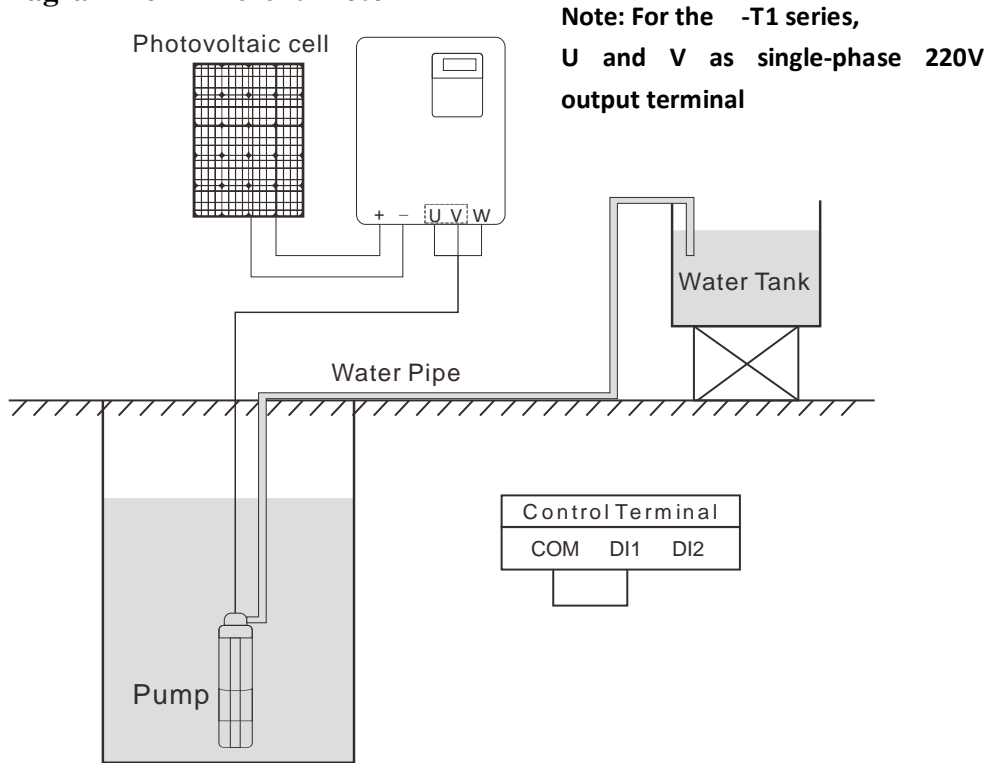


Diagram 3-5 220V 3-phase installed without water level sensor (PV Input)

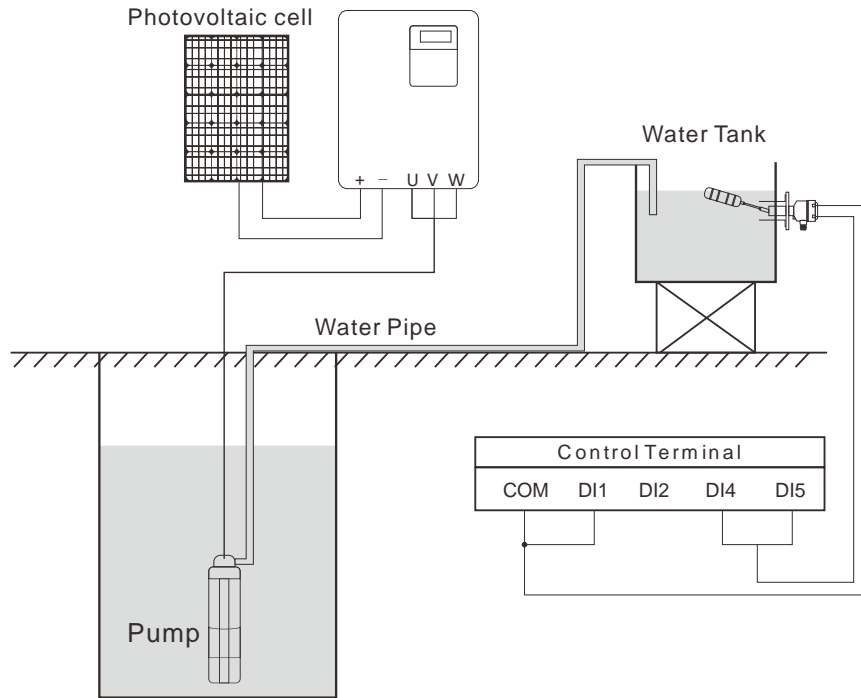


Diagram 3-6 Diagram of 3-phase solar inverter connection method (PV Input)

3.5.1 Wiring for automatic water-level control

Wiring of water-level float switch

The common cable port of the water-level float switch should be connected to the COM terminal and then connected to the DI1 terminal.

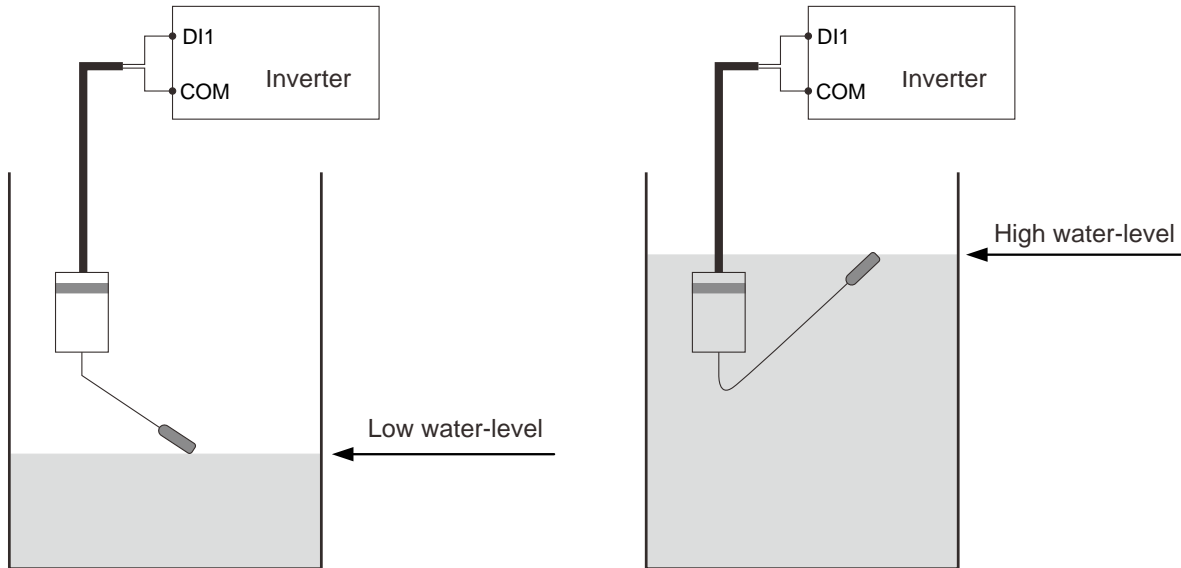


Diagram3-7 Diagram for independent Low water level and high water level switches

Remarks: When the actual water-level in the tank is higher than the horizontal line of high water-level, DI1 will be connected to the COM as well as controller automatically will start the pump. On the contrary, if the actual water-level is lower than the horizontal line of low water-level, DI1 will be disconnected from COM as well and

the controller will automatically stop the pump.

Wiring for water-level float switches mounted on the side

The water-level switch mounted on the side is the normally open contact to output and its common wire is connected to the terminal COM of inverter. At the same time, the low level-water wire is connected to terminal DI4 and the high water-level wire is connected the terminal DI5.

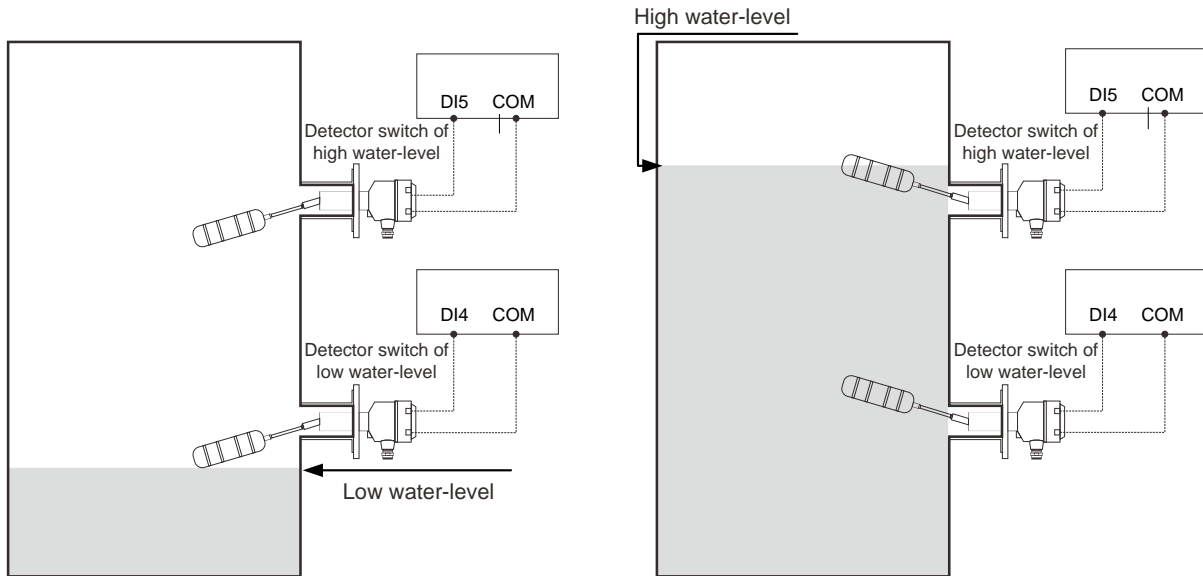


Diagram3-8 Diagram for a combination of Low water level and high-water level switches

Remarks: When the actual water-level in the tank is lower than horizontal line of low water-level, DI4 and DI5 will be disconnected from COM and the controller will automatically start the pump. On the contrary, if the actual water-level is higher than the horizontal line of high water-level, DI4 and DI5 will be connected to COM as well and the controller will automatically stop the pump to prevent water overflow.

Notice: If only using one detection signal for water-level detection in the tank, DI4 and DI5 must be bridged.

4 Operation and display

4.1 Instruction of operation and display



Diagram 4-1 Operating panel

No.	Name	Function	
①	LED display area	The 5-digit LED display is able to display the set frequency, output frequency, monitoring data and fault codes.	
②	Unit / Status Indicator area	Hz	Frequency unit
		A	Current unit
		V	Voltage unit
		STOP/RUN	OFF indicates that the solar inverter is in the stop state and ON indicates that the solar inverter is in the running state.
		FWD/REV	It is Forward/Reversal indicator, ON indicates Reverse rotation.
		LOCAL/REMOTE	It indicates whether the solar inverter is operated by operation keypad, terminals or remoter (communication). OFF indicates keypad operation control state; ON indicates terminals operation control state; Blinking indicates remote operation control state.
		TRIP/ALARM	Tuning/ Torque Control/Fault indicator When the indicator is ON, it indicates torque control mode. When the indicator is blinking slowly, it indicates the auto-tuning state. When the indicator is blinking quickly, it indicates the fault state.
③	Encoder knob	For frequency, data or function code increase or decrease.	
④	Operation key area		Programming key: Enter or exit menu level.
			Confirmation key: Enter the menu interfaces level by level and confirm the parameter setting.
			Multi-function key: Perform function switchover according to the setting of b9-01.
			Shift key: Select the displayed parameters during the stop or running state and select the digit to be modified when modifying parameters.
			Increment key: Increase data or function code.
			Decrement key: Decrease data or function code.
			Running key: Start the solar inverter in the keypad control mode.
			Stop/Reset key: Stop the solar inverter when it is in the running state and perform the reset operation when it is in the fault state. The functions of this key are restricted by b9-00.

4.2 Function Code Table

If FP-00 is set to a non-zero number, parameter protection is enabled. The correct user password must be entered to allow access to the menu. To cancel the password protection function, enter the password and set FP-00 to 0.

The parameter menu under the user-defined parameter mode can be accessed directly without a password.

Group “A” includes solar inverter system parameters. Group “F” includes basic function parameters. Group “U” includes monitoring function parameters.

Code	Name	Description	Default
F0: Basic function parameters			
F0-00	G/P type selection	1: G type (Constant torque load models) 2: P type (Fan, water pump load models)	Model dependent
F0-02	Command source selection	0: Keypad control (LED off) 1: Terminal control (LED on) 2: Communication control (LED blinking)	0
F0-03	Main frequency source X selection	0: Digital setting (Preset frequency F0-08, UP/DOWN modifiable, no-record after power off) 1: Digital setting (Preset frequency F0-08, UP/DOWN modifiable, record after power off) 2: AI1 3: AI2 4: Keypad potentiometer 9: Communication setting	4
F0-08	Preset frequency	0.00Hz~maximum frequency(F0-10)	50.00Hz
F0-09	Rotation direction	0: Forward; FWD/REV lights off; 1: Reverse; FWD/REV lights on;	0
F0-10	Maximum frequency	50.00Hz~500.00Hz	50.00Hz
F0-11	Source of frequency upper limit	0: Set by(F0-12) 1: AI1 2: AI2 3: AI3 5: Communication setting	0
F0-12	Frequency upper limit	Frequency lower limit (F0-14)~maximum frequency (F0-10)	50.00Hz
F0-13	Frequency upper limit offset	0.00Hz~maximum frequency (F0-10)	0.00Hz
F0-14	Frequency lower limit	0.00Hz~frequency upper limit (F0-12)	0.00Hz
F0-15	Carrier frequency	0.5kHz~16.0kHz	Model dependent
F0-16	Carrier frequency adjustment with temperature	0: No 1: Yes	1
F0-17	Acceleration time 1	0.00s~650.00s (F0-19=2) 0.0s~6500.0s (F0-19=1) 0s~65000s (F0-19=0)	Model dependent
F0-18	Deceleration time 1	0.00s~650.00s (F0-19=2) 0.0s~6500.0s (F0-19=1) 0s~65000s (F0-19=0)	Model dependent
F0-19	Acceleration/Deceleration time unit	0: 1s 1: 0.1s 2: 0.01s	1
F0-23	Record of digital setting frequency of power failure	0: not record 1: record	0
F0-25	Acceleration/Deceleration time base frequency	0: Maximum frequency (F0-10) 1: Set frequency 2: 100Hz	0
F0-26	Base frequency for UP/ DOWN modification during running	0: Running frequency 1: Setting frequency	0

Code	Name	Description	Default
F0-27	Binding command source to frequency source	Unit's digit: Binding keypad command to following frequency source. 0: No binding 1: Frequency source by digital setting 2: AI1 3: AI2 4: Keypad potentiometer 9: Communication setting Ten's digit: Binding terminal command to frequency source. Hundred's digit: Binding communication command to frequency source.	0000
F0-28	Serial communication protocol	0: MODBUS-RTU protocol	0
F1: Motor parameter			
F1-00	Motor type selection	0: General asynchronous motor 1: Variable frequency asynchronous motor	0
F1-01	Rated motor power	0.1kW~1000.0kW	Model dependent
F1-02	Rated motor voltage	1V~2000V	Model dependent
F1-03	Rated motor current	0.01A~655.35A (solar inverter power ≤55kW) 0.1A~6553.5A (solar inverter power >55kW)	Model dependent
F1-04	Rated motor frequency	0.01Hz~maximum frequency	Model dependent
F1-05	Rated motor rotational speed	1rpm~65535rpm	Model dependent
F4: input terminals parameters			
F4-00	DI1 function selection	0: No function	01
F4-01	DI2 function selection	1: Forward RUN (FWD) or running command	09
F4-02	DI3 function selection	2: Reverse RUN (REV) or the direction of FED/REV	53
F4-03	DI4 function selection	4: Forward JOG(FJOG)	51
F4-04	HDI function selection	5: Reverse JOG(RJOG)	52
F4-05	DI5 function selection	8: Free stop 9: Fault reset (RESET) 10: Run pause 11: Normally open (NO) input of external fault 33: Normally closed (NC) input of external fault 36: External STOP terminal 1 44: User-defined fault 1 47: Emergency stop 48: External STOP terminal 2 51: Full-water detection 1 52: Full-water detection 2 53: MPPT stop/ Photovoltaic control stop	02
F4-13	AI curve1 Min. input Value	00.00V~F4-15	00.00V
F4-14	Corresponding setting of AI curve1 Min.input	-100.0%~+100.0%	000.0%
F4-15	AI curve1 input maximum value	F4-13~+10.00V	10.00V
F4-16	Corresponding setting of AI curve1 input maximum value	-100.0%~+100.0%	100.0%
F4-17	AI1 input filter time	0.00s~10.00s	00.10s
F4-18	AI curve 2 Min. input Value	0.00V~F4-20	00.00V
F4-19	Corresponding of AI curve 2 Min. input Value	-100.0%~+100.0%	000.0%
F4-20	AI curve2 input maximum value	F4-18~+10.00V	10.00V
F4-21	Corresponding of AI curve2	-100.0%~+100.0%	100.0%

Code	Name	Description	Default
	input maximum value		
F4-22	AI2 filter time	0.00s~10.00s	00.10s
F4-35	DI1 delay time	0.0s~3600.0s	0.0s
F4-36	DI2 delay time	0.0s~3600.0s	0.0s
F4-37	DI3 delay time	0.0s~3600.0s	0.0s
F9: Fault and Protection parameters			
F9-09	Fault auto reset times	0~20	20
F9-10	Relay action selection during fault auto reset	0: Not act 1: Act	0
F9-11	Time interval of fault auto reset	0.1s~100.0s	5.0s
F9-12	Input phase loss protection/contactor energizing protection selection	Unit's digit: Input phase loss protection Ten's digit: Contactor energizing protection 0: Disabled 1: Enabled	00
F9-13	Output phase loss protection	0: Disabled 1: Enabled	0
F9-14	Fault types	0: No fault 2: Over current during acceleration 3: Decelerated current during acceleration 4: Over current at constant speed 5: Overvoltage during acceleration 6: Decelerated voltage during deceleration 7: Overvoltage at constant speed 9: Less voltage fault 10: Solar inverter overload 11: Motor overload 12: Power input phase loss 13: Power output phase loss 14: IGBT Module overheat 15: External equipment fault 16: Communication fault 18: Current detection fault 21: EEPROM read- write fault 22: Solar inverter hardware fault 23: Short circuit to ground 26: Accumulative running time reached 27: User-defined fault 1 28: User-defined fault 2 29: Accumulative power-on time reached 40: Fast current limit fault 43: Motor over-speed 55: Load distribution slave failure	00
F9-37	Frequency of fault	—	—
F9-38	Current of fault	—	—
F9-39	DC Bus voltage of fault	—	—
F9-40	Input terminals status of fault	—	—
F9-41	Output terminal status of fault	—	—
F9-42	Solar inverter status of fault	—	—
F9-43	Power-on time of fault	—	—
F9-44	Running time of fault	—	—
FE: parameters for solar water pump control			
FE-00	PV inverter Selection	0: Disabled 1: Enabled	1
FE-01	Vmpp voltage Selection	0: Manual setting 1: MPPT Automatic algorithm tracking	1

Code	Name	Description	Default
FE-02	Vmpp voltage manual Reference value	0-1000.0V	500.0V
FE-03	Motor Selection	0: General 3-phase ac motor 1: Single-phase motor with capacitor 2: Single-phase motor without capacitor	0
FE-04	CVT proportional gain 1	0.0%-999.9%	100.0%
FE-05	CVT Integral gain 1	0.0%-999.9%	100.0%
FE-06	Reserved	--	--
FE-07	Reserved	--	--
FE-08	Reserved	--	--
FE-09	Reserved	--	--
FE-10	Mppt search upper limit voltage	0-1000.0V	750.0V
FE-11	Mppt search lower limit voltage	0-1000.0V	300.0V
FE-12	MPPT search gain	0%-500%	100%
FE-13	MPPT search time interval	0.0-10.0s	1.0sec
FE-14	Reserved	0	0
FE-15	Reserved	0	0
FE-16	Dormancy voltage	0.0-1000.0V	300.0V
FE-17	Dormancy wake-up voltage	0.0-1000.0V	350.0V
FE-18	Dormancy wake-up time	0-30000sec	60sec
FE-19	Detection frequency of low frequency protection	0.00Hz~300.00Hz	10.00Hz
FE-20	Detection time of low frequency protection	0-30000s	10sec
FE-21	Low frequency protection automatic recovery time	0-30000s	60sec
FE-22	Detection current of dry pumping protection	0.0-999.9A	0.0A
FE-23	Detection time of dry pumping protection	0-30000s	10sec
FE-24	Automatic recovery time of dry pumping protection	0-30000s	60sec
FE-25	Detection current of overcurrent protection	0.0-999.9A	0.0A
FE-26	Detection time of overcurrent protection	0-30000s	10sec
FE-27	Over current protection automatic recovery time	0 -30000s	60sec
FE-28	Min. power protection value	0.00kw - 650.00kw	0.00kw
FE-29	Detection time of Min. power protection	0 - 30000s	0sec
FE-30	Min. power protection automatic recovery time	0 - 30000s	0sec
FE-31	Full water detection mode	0: terminal 1: AI1 2: AI2	0
FE-32	Analog full-water detection Thresholds	0-100.0%	25.0%
FE-33	Detection time of full-water protection	0-30000s	10sec
FE-34	Exit time of full-water protection	0-30000s	60sec
FE-35	Analog sensor damaged Thresholds	0-100.0%	0.0%
FE-36	PV DC correction coefficient	0.0-200.0%	100.00%
FE-37	PV DC correction offset	-100.00A-100.00A	0.00A
FE-38	Power curve point 0	0.0kw-999.9kw	0.5kw
FE-39	Power curve point 1	0.0kw-999.9kw	1.0kw

Code	Name	Description	Default
FE-40	Power curve point 2	0.0kw-999.9kw	1.5kw
FE-41	Power curve point 3	0.0kw-999.9kw	2.0kw
FE-42	Power curve point 4	0.0kw-999.9kw	2.5kw
FE-43	Flow curve point 0	0.0-999.9m ³ /h	0.0 m ³ /h
FE-44	Flow curve point 1	0.0-999.9m ³ /h	5.0 m ³ /h
FE-45	Flow curve point 2	0.0-999.9m ³ /h	10.0m ³ /h
FE-46	Flow curve point 3	0.0-999.9m ³ /h	15.0m ³ /h
FE-47	Flow curve point 4	0.0-999.9m ³ /h	20.0m ³ /h
FP: Parameters for User password			
FP-00	User password	0 ~ 65535	00000
FP-01	Restore default settings	0: No operation 1: Restore default settings except motor parameters and accumulation record. 02: Clear records 04: Back up present user parameters 501: Restore user backup parameters	0
FP-02	Function parameter group display selection	Unit's digit: U group display selection 0: Not displayed 1: Display Ten's digit: A Show Select 0: Not displayed 1: Display	01
FP-04	Parameter modification property	0: modifiable 1: Not modifiable	0
U0: Monitoring parameters			
U0-00	Running frequency (Hz)	--	0.01Hz
U0-01	Setting frequency (Hz)	--	0.01Hz
U0-02	PV voltage (V)	--	0.1V
U0-03	Output voltage (V)	--	1V
U0-04	Output current (A)	--	0.01A
U0-05	PV power (KW)	--	0.1KW
U0-06	PV current (A)	--	0.01A
U0-07	DI input status	--	1
U0-08	DO output status	--	1
U0-09	AI1	--	0.01V
U0-10	AI2	--	0.01V
U0-11	KAI	--	0.01V
U0-12	PV open circuit voltage	--	0.1V
U0-13	Pump flow speed	--	0.1m ³ /hr
U0-14	Daily flow	--	0.1m ³
U0-15	Cumulative flow (low water level)	--	0.1m ³
U0-16	Cumulative flow (high water level)	--	0.1Km ³
U0-17	Daily generated electricity	--	0.1kwh
U0-18	Cumulative electricity consumption (low water level)	--	0.1kwh
U0-19	Cumulative electricity consumption (high water level)	--	1Mwh
Ar: Alarm Codes			
Ar.01	Dormancy		-
Ar.02	Low frequency protection		-
Ar.03	Dry pumping protection /underload		-
Ar.04	Overcurrent protection		-
Ar.05	Min. power protection		-
Ar.06	Full-water protection		-
Ar.07	Analog sensor fault		-

5. Description of Function Codes

F0: Basic Function Parameters Group

F0-00	G/P type selection	1: G type (Constant torque load models) 2: P type (Fan, water pump load models)	Model dependent
-------	--------------------	--	-----------------

This parameter is used to display the relevant model and cannot be modified.

1: Applicable to constant torque general load with rated parameters specified.

2: Applicable to variable torque load (fan and pump) with rated parameters specified.

F0-02	Command source selection	0: Keypad control (LED off) 1: Terminal control (LED on) 2: Communication control (LED blinking)	0
-------	--------------------------	--	---

This parameter is used to specify the input channel of the solar inverter. This includes the control commands, such as run, stop, forward rotation, reverse rotation and jog operation. The following three command sources can be used::

0: Keypad control ("LOCAL/REMOTE" indicator off)

Commands are given by pressing keys "RUN" and "STOP/RESET" on the operation panel.

1: Terminal control ("LOCAL/REMOTE" indicator on)

Commands are given by means of multifunctional input terminals with functions such as FWD, REV, JOGF, and JOGR.

2: Communication control ("LOCAL/REMOT" indicator blinking)

Commands are given from host computer. For more details please refer to the appendix of communication protocol.

F0-03	Main frequency source X selection	0: Digital setting (Preset frequency F0-08, UP/DOWNUP/DOWN modifiable, no-record after power off) 1: Digital setting (Preset frequency F0-08, UP/DOWNUP/DOWN modifiable, record after power off) 2: AI1 3: AI2 4: Keypad potentiometer 9: Communication setting	4
-------	--------------------------------------	--	---

This parameter is used to specify the source for the main frequency. The main frequency can be set using the following 10 channels:

0: Digital setting (not record at power failure)

The initial value of the set frequency is the value of F0-08 (Preset frequency). You can change the set frequency by pressing ▲ and ▼ on the operation panel (or using the UP/DOWN function of input terminals).

When the solar inverter is powered on again after power failure, the set frequency reverts to the value of F0-08 (record digital setting frequency)

1: Digital setting (record at power failure)

The initial value of the set frequency is the value of F0-08(Preset frequency). You can change the set frequency by pressing keys ▲ and ▼ on the operation panel (or using the UP/DOWN functions of input terminals).

When the solar inverter is powered on again after power failure, the setting frequency is the value memorized at the moment of the last power failure.

Note that F0-23 (record digital setting frequency of power failure) F0-23 determines whether the set frequency is

memorized or cleared when the solar inverter stops. It is related to stopping rather than power failure.

2: AI1

3: AI2

The frequency is set by analog input. The control board provides two analog input (AI) terminals (AI1, AI2).

Including:

AI1: 0V~10 V voltage input or 0mA~20mA current input, determined by jumper JP2 on the control card;

AI2: 0V~10 V voltage input or 0mA~20mA current input, determined by jumper JP3 on the control card;

The corresponding relationship curve between the input voltage of AI1, AI2 and the target frequency can be user-defined.

provides 5 corresponding curves, 3 groups curves are linear relation (2 point correspondence), 2 curves are arbitrary curve of 4 points corresponding relationship, User can set by F4-13 ~ F4-27 function code and A6 group function code. F4-33 is used to set the AI1~AI2 two analog input. When AI is used as the frequency setting source, the corresponding value 100% of the voltage/current input corresponds to the value of F0-10 (Maximum frequency).

4: Keypad potentiometer

9: Communication setting

The frequency is set by communication mode.

F0-08	Preset frequency	0.00Hz~ maximum frequency(F0-10)	50.00Hz
-------	------------------	----------------------------------	---------

If the frequency source is digital setting, the value of this parameter is the initial frequency of the solar inverter (digital setting).

F0-09	Rotation direction	0: Forward direction 1: Reverse direction	0
-------	--------------------	--	---

You can change the rotation direction of the motor just by modifying this parameter without changing the motor wiring. Modifying this parameter is equivalent to exchanging any two phases of the motor's U, V, W wires.

Note:

The motor will restore its original running direction after parameter initialization. Do not use this function in applications where changing the rotating direction of the motor is prohibited after system commissioning is complete.

F0-10	Maximum frequency	50.00Hz~ 500.00Hz	50.00Hz
-------	-------------------	-------------------	---------

When the frequency source is AI, pulse setting (HDI), or Multi-segment speed, the 100% of input corresponds to the value of this parameter.

F0-11	Source of frequency upper limit	0: Set byF0-12 1: AI1 2: AI2 3: Keypad potentiometer 5: Communication setting	0
-------	---------------------------------	---	---

It is used to set the source of the frequency upper limit, including digital setting (F0-12), AI, pulse setting or communication setting.

F0-12	Frequency upper limit	Frequency lower limit (F0-14)~maximum frequency(F0-10)	50.00Hz
-------	-----------------------	--	---------

Setting Frequency upper limit.

F0-13	Frequency upper limit offset	0.00Hz~maximum frequency (F0-10)	0.00Hz
-------	------------------------------	----------------------------------	--------

If the source of the frequency upper limit is analog input, set F0-13 as the offset value, the final frequency upper limit is obtained by adding the offset in this parameter to the frequency upper limit set in F0-11

F0-14	Frequency lower limit	0.00Hz~frequency upper limit (F0-12)	0.00Hz
-------	-----------------------	--------------------------------------	--------

If the frequency command is lower than the value of this parameter set by F0-14, the solar inverter can stop, r run at the frequency lower limit, or run at zero speed. The result can be determined by F8-14(setting frequency lower than

frequency lower limit running mode).

F0-17	Acceleration time 1	0.00s~650.00s(F0-19=2) 0.0s~6500.0s(F0-19=1) 0s~65000s(F0-19=0)	Model dependent
F0-18	Deceleration time 1	0.00s~650.00s(F0-19=2) 0.0s~6500.0s(F0-19=1) 0s~65000s(F0-19=0)	Model dependent

Acceleration time indicates the time required by the solar inverter to accelerate from 0 Hz to "Acceleration / Deceleration base frequency" (F0-25) that is, t1 in Diagram 6-1.

Deceleration time indicates the time required by the solar inverter to decelerate from "Acceleration / Deceleration base frequency" (F0-25), to 0 Hz, that is, t2 in Diagram 5-1.

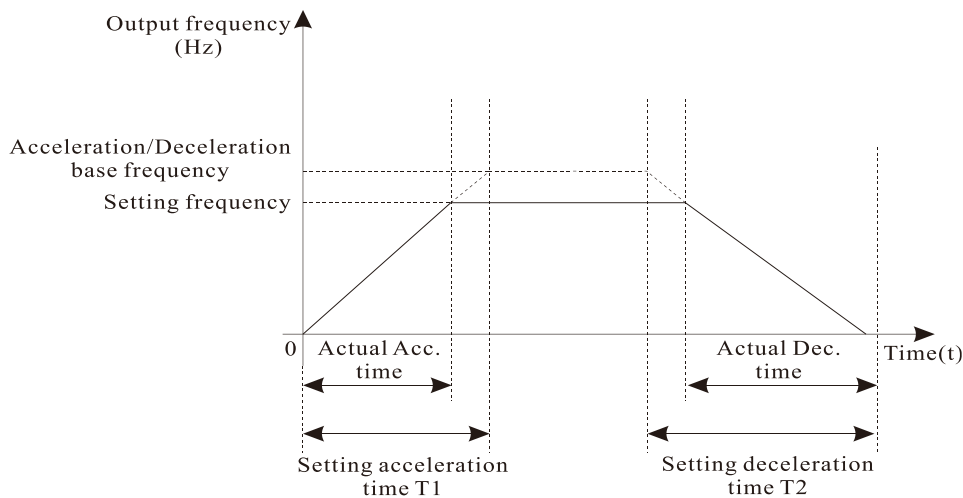


Diagram 5-1 Acceleration/Deceleration time

F0-19	Acceleration/Deceleration time unit	0: 1s 1: 0.1s 2: 0.01s	1
-------	-------------------------------------	------------------------------	---

To satisfy requirements for different applications the inverter provides three acceleration/ deceleration time units, 1s, 0.1s and 0.01s.

Note: Modifying this parameter will make the decimal places of all frequency-related parameters change and their corresponding frequency values change. Pay attention to this at on-site applications.

F0-23	Record of digital setting frequency of power failure	0: not record 1: record	0
-------	--	----------------------------	---

This parameter is valid only when the frequency source is digital setting.

If F0-23 is set to 0, the digital setting frequency value restore to the value of F0-08 (Preset frequency) after the solar inverter stops. The modification by using keys ▲ and ▼ or the terminal UP/DOWN function is cleared to zero.

If F0-23 is set to 1, the digital setting frequency value “Reserved” is the set frequency at the moment when the solar inverter stops. The modification by using keys ▲ and ▼ or the terminal UP/ DOWN function remains is record and valid.

F0-25	Acceleration/Deceleration time base frequency	0: Maximum frequency(F0-10) 1: Set frequency 2: 100Hz	0
-------	---	---	---

The acceleration/deceleration time indicates the time for the solar inverter to increase from 0 Hz to the frequency set in F0-25, figure 6-1 is the acceleration/deceleration time diagram.

If this parameter is set to 1, the acceleration/deceleration time is related to the set frequency. If the set frequency

changes frequently, the motor's acceleration/deceleration also changes. Pay attention to this at on-site applications.

F0-26	Base frequency for UP/ DOWN modification during running	0: Running frequency 1: Setting frequency	0
-------	---	--	---

This parameter is valid only when the frequency source is digital setting. It is used to set the base frequency to be modified by using keys ▲ and ▼ or the terminal UP/DOWN function. If the running frequency and setting frequency are different, there will be a large difference between the solar inverter's performance during the acceleration/ deceleration process.

F0-27	Binding command source to frequency source	Unit's digit: Binding keypad command to following frequency source. 0: No binding 1: Frequency source by digital setting 2: AI1 3: AI2 4: AI3 9: Communication setting Ten's digit: Binding terminal command to frequency source. Hundred's digit: Binding communication command to frequency source.	0000
-------	--	---	------

It is used to bind the three running command sources with the nine frequency sources, facilitating to implement synchronous switchover. For details on the frequency sources, see the description of F0-03 (Main frequency source X selection). Different running command sources can be bound to the same frequency source. If a command source is bound to a frequency source, the frequency source set in F0-03~F0-07 no longer takes effect when this command source is effective.

F0-28	Serial communication protocol	0: Protocol MODBUS-RTU	0
-------	-------------------------------	------------------------	---

The use of serial port communication protocol MODBUS.

F1 Motor Parameter

F1-00	Motor type selection	0: General asynchronous motor 1: Variable frequency asynchronous motor	0
F1-01	Rated motor power	0.1kW~1000.0kW	Model dependent
F1-02	Rated motor voltage	1V~2000V	Model dependent
F1-03	Rated motor current	0.01A~655.35A (solar inverter power ≤55kW) 0.1A~6553.5A (solar inverter power >55kW)	Model dependent
F1-04	Rated motor frequency	0.01Hz~maximum frequency	Model dependent
F1-05	Rated motor rotational speed	1rpm~65535rpm	Model dependent

Set the parameters according to the motor nameplate no matter whether V/F control or vector control is adopted. To achieve better V/F or vector control performance, motor auto-tuning is required. The motor auto-tuning accuracy depends on the correct setting of motor nameplate parameters.

F4 Input Terminals

The inverter provides six digital input (DI) terminals (HDI can be used for high-speed pulse input) and two analog input (AI) terminals. The optional extension card provides another six DI terminals (DI7 to DI12) and one AI terminal (AI3).

F4-00	DI1 function selection	1: Forward RUN (FWD)	Standard
F4-01	DI2 function selection	9	Standard
F4-02	DI3 function selection	53	Standard
F4-03	DI4 function selection	51	Standard
F4-04	HDI function selection	52	Standard
F4-05	DI5 function selection	2	Standard

The following table lists the functions available for the DI terminals.

Value	Function	Description
0	No function	Set 0 for reserved terminals to avoid malfunction.
1	Forward RUN (FWD) or running command	The terminal is used to control forward or reverse running of the solar inverter.
2	Reverse RUN (REV) or the direction of FED/REV	
4	Forward JOG (FJOG)	FJOG for the JOG forward running, RJOG for the JOG reverse running.
5	Reverse JOG (RJOG)	
8	Free stop	
9	Fault reset (RESET)	
10	RUN pause	
11	Normally open (NO) input of external fault	
33	Normally closed (NC) input of external fault	
36	External STOP terminal 1	
44	User-defined fault 1	
47	Emergency stop	
48	External STOP terminal 2	
51	Full-water detection 1	Two probes any access, from the water-full position to maintain a certain height difference in the installation
52	Full-water detection 2	
53	MPPT stop/ Photovoltaic control stop	Into the common speed mode

F4-13	AI curve1 Min. input	0.00V ~ F4-15	0.00V
F4-14	Corresponding setting of AI curve1 Min. input	-100.00% ~ 100.0%	0.0%
F4-15	AI curve1 input maximum value	F4-13 ~ 10.00V	10.00V
F4-16	Corresponding setting of AI curve1 input maximum value	-100.00% ~ 100.0%	100.0%
F4-17	AI1 filter time	0.00s ~ 10.00s	0.10s

These parameters are used to define the relationship between the analog input voltage and the corresponding setting value.

When analog input voltage is larger than setting "Max. input" (F4-15), Analog voltage should be calculated as "Max. input". The same, When analog input voltage is smaller than setting "Min. input" (F4-13), Analog voltage should be calculated as "Min. input" F4-34.

When the analog input is current input, 1 mA current corresponds to 0.5 Volts.

(AI1 filter time) is used to set the software filter time of AI1. If the analog input is liable to interference, increase the value of this parameter to stabilize the detected analog input. However, increasing the AI filter time will slow down the response of analog detection. Set this parameter properly based on actual conditions.

In different applications, 100% of analog input corresponds to different nominal values. For details, refer to the description of different applications.

Following tables for reference:

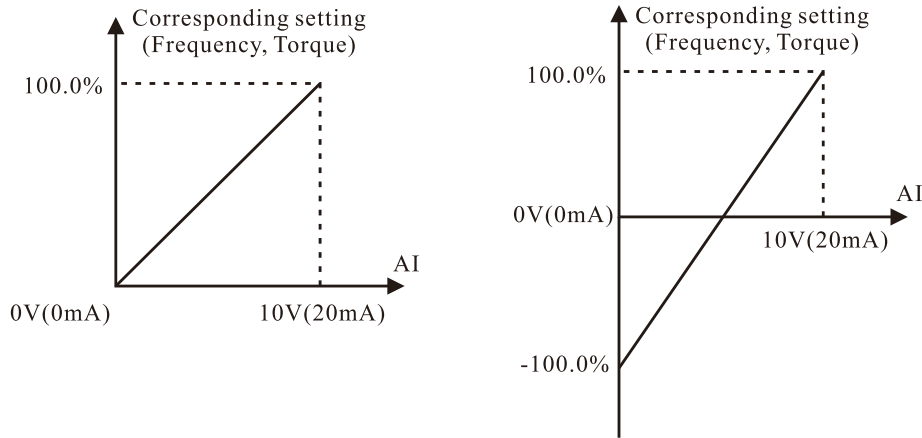


Diagram 5-2 The relationship between analog given and setting value

F4-35	DI1 delay time	0.0s ~ 3600.0s	0.0s
F4-36	DI2 delay time	0.0s ~ 3600.0s	0.0s
F4-37	DI3 delay time	0.0s ~ 3600.0s	0.0s

When DI status changes, the Inverter delays this action.

Only DI1, DI2 and DI3 has delay time functions.

F9 Faults and protection parameters

F9-09	Fault auto reset times	0~20	20
-------	------------------------	------	----

It is used to set the times of fault auto resets if this function is used. After the value is exceeded, the solar inverter will remain in the fault state.

F9-10	Do action selection during fault auto reset	0: Not act 1: Act	0
-------	---	----------------------	---

It is used to decide whether DO acts during the fault auto reset if the fault auto reset function is used.

F9-11	Time interval of fault auto reset	0.1s ~ 100.0s	5.0s
-------	-----------------------------------	---------------	------

is used to set the waiting time from the solar inverter alarm to fault auto reset.

F9-12	Input phase loss protection/contactor energizing protection selection	Unit's digit: Input phase loss protection Ten's digit: Contactor energizing protection 0: Disabled 1: Enabled	00
-------	---	--	----

It is used to determine whether to perform input phase loss or contactor energizing protection.

F9-13	Output phase loss protection	0: Disabled 1: Enabled	0
-------	------------------------------	---------------------------	---

It is used to determine whether to perform output phase loss protection.

F9-14	Fault type	0 ~ 99	00
-------	------------	--------	----

It is used to record the types of the most recent three faults of the solar inverter. 0 indicates no fault.

F9-37	Frequency of fault	It displays the frequency when the latest fault occurs.											
F9-38	Current of fault	It displays the current when the latest fault occurs.											
F9-39	DC Bus voltage of fault	It displays the DC bus voltage when the latest fault occurs.											
F9-40	Input terminals status of fault	<p>It displays the status of all DI terminals when the latest fault occurs. The sequence is as follows:</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>BIT9</td><td>BIT8</td><td>BIT7</td><td>BIT6</td><td>BIT5</td><td>BIT4</td><td>BIT3</td><td>BIT2</td><td>BIT1</td><td>BIT0</td> </tr> </table> <p style="text-align: center;">DI0 DI9 DI8 DI7 HDI DI5 DI4 DI3 DI2 DI1</p> <p>If a DI is ON, the setting is 1. If the DI is OFF, the setting is 0. The value is the equivalent decimal number converted from the DI status.</p>		BIT9	BIT8	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
BIT9	BIT8	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0				
F9-41	Output terminal status of fault	<p>It displays the status of all output terminals when the latest fault occurs. The sequence is as follows:</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>BIT4</td><td>BIT3</td><td>BIT2</td><td>BIT1</td><td>BIT0</td> </tr> </table> <p style="text-align: center;">DO2 DO1 REL REL FMP</p> <p>If an output terminal is ON, the setting is 1. If the output terminal is OFF, the setting is 0. The value is the equivalent decimal number converted from the DI statuses.</p>		BIT4	BIT3	BIT2	BIT1	BIT0					
BIT4	BIT3	BIT2	BIT1	BIT0									
F9-42	Solar inverter status of fault	Reserved											
F9-43	Power-on time of fault	It displays the present power-on time when the latest fault occurs.											
F9-44	Running time of latest fault	It displays the present running time when the latest fault occurs.											

FE Solar water pump control parameters

FE-00	PV inverter selection	0: Disabled 1: Enabled	1
-------	-----------------------	---------------------------	---

If set to 0, the solar inverter will be operate as a normal frequency inverter.

FE-01	Vmpp voltage reference selection	0: Manual 1: MPPT Automatic algorithm tracking	1
FE-02	Vmpp voltage manual setting value	0 - 1000.0V	500.0V

It is for setting solar panels working point voltage Vmpp. Solar water pump's working theory as below: Vmpp is selected between FE-01 MPPT running result and FE-02, then output running frequency by CVT controller.

FE-03	Motor Selection	0: General 3-phase ac motor 1: Single-phase motor with capacitor	--
-------	-----------------	---	----

		2: Single-phase motor without capacitor	
--	--	---	--

- 0: General 3-phase ac motor
- 1: Single-phase motor with capacitor
- 2: Single-phase motor without capacitor

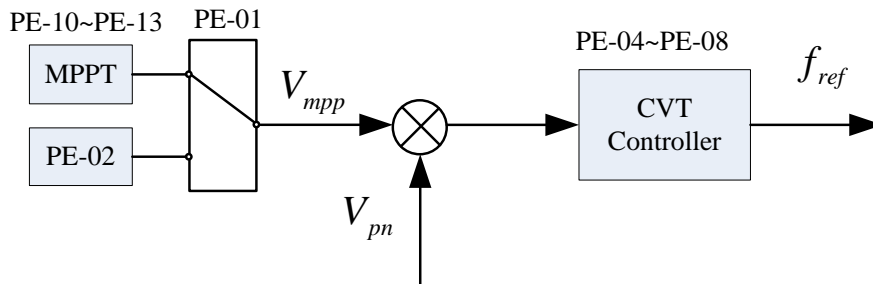


Diagram 5-3 Photovoltaic water pump control schematic

FE-04	CVT proportional gain 1	0.0% - 999.9%	100.0%
FE-05	CVT Integral gain1	0.0% - 999.9%	100.0%

It is CVT controller's PI parameters, it should be switchover in two groups according to solar cells V_{pn} voltage, switchover point is FE-08V; switchover point FE-08 default as 0.0V. It is for enable the first group parameters, switchover theory as below diagram:

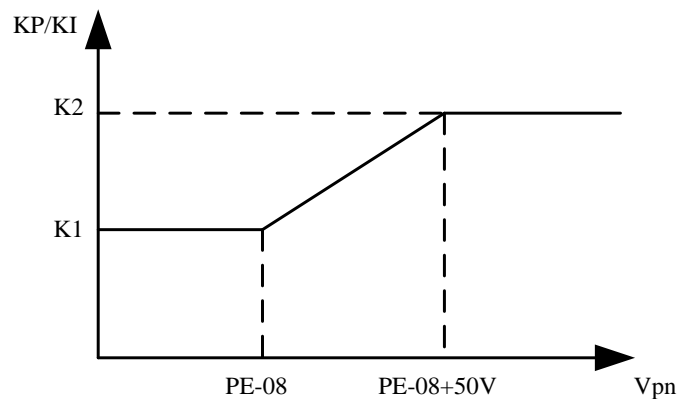


Diagram 5-4 Switch the schematic

CVT controller is the core parts for solar water pump control, if any unbalance output frequency, please close MPPT (select manual reference V_{mpp}), then adjust proportional gain or Integral gain till frequency is stable; after that, open MPPT search again;

FE-10	Mppt search upper limit voltage	0 - 1000.0V	750.0V
FE-11	Mppt search lower limit voltage	0 - 1000.0V	300.0V
FE-12	MPPT search gain	0% - 500%	100%
FE-13	MPPT search time interval	0.0 - 10.0sec	1.0sec

FE-10/FE-11 set MPPT search V_{mpp} 's upper or limit value, FE-12 set search gain, FE-13 set search time interval, If open MPPT, frequency fluctuation is very large, decrease search gain and increase search time interval to improve its stability.

FE-31	Full-water detection mode	0: terminal	0
-------	---------------------------	-------------	---

		1: AI1 2: AI2	
FE-32	Analog full-water detection Thresholds	0 - 100.0%	25.0%
FE-33	detection time of full-water protection	0 - 30000sec	10sec
FE-34	exit time of full-water protection	0 - 30000sec	60sec
FE-35	analog sensor damaged Thresholds	0 - 100.0%	0.0%

FE-31 is for Full-water detection mode.

If set to 0, set any terminals (default DI4/DI5) function code to 51/52, two terminals enabled in same time could activate Full-water protection and two terminals disabled in same time could activate exit Full-water protection.

One of the terminals enabled, remains its status without any change.

FE-33/FE-34 for detection time of full-water protection and exit time of full-water protection.

FE-35 for analog sensor damaged Thresholds, if FE-31 set to analog detection, and analog feedback is larger than the setting detection Threshold value of FE-35. Judge it as analog sensor faults. Display A.Prb, and stop running;

FE-31 set to 0, close sensor faults detection.

FE-36	PV DC correction coefficient	0.0 - 200.0%	100.00%
FE-37	PV DC correction offset	-100.00A - 100.00A	0.00A

As software estimating solar cells' DC current value, this parameters will correction this estimation value, U0-06 displays correction current, correction formula is $U0-06 = (\text{estimation value} * FE-36) + FE-37$;

FE-38	power curve point 0	0.0kw - 999.9kw	0.5kw
FE-39	power curve point 1	0.0kw - 999.9kw	1.0kw
FE-40	power curve point 2	0.0kw - 999.9kw	1.5kw
FE-41	power curve point 3	0.0kw - 999.9kw	2.0kw
FE-42	power curve point 4	0.0kw - 999.9kw	2.5kw
FE-43	flow curve point 0	0.0 - 999.9m ³ /h	0.0 m ³ /h
FE-44	flow curve point 1	0.0 - 999.9m ³ /h	5.0 m ³ /h
FE-45	flow curve point 2	0.0 - 999.9m ³ /h	10.0m ³ /h
FE-46	flow curve point 3	0.0 - 999.9m ³ /h	15.0m ³ /h
FE-47	flow curve point 4	0.0 - 999.9m ³ /h	20.0m ³ /h

According output power (U0-05) calculate output flow speed (U0-13), User reference (P-Q curve), input to FE-38~FE-47, software automatically calculate U0-13; Generally, P-Q curve as below:

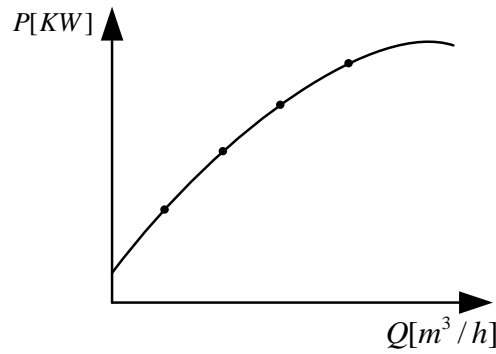


Diagram 5-5 P-Q curve

FP User password parameters

FP-00	User password	0 ~ 65535	0
-------	---------------	-----------	---

If it is set to any non-zero number, the password protection function is enabled. After a password has been set and taken effect, you must enter the correct password in order to enter the menu. If the entered password is incorrect you cannot view or modify parameters.

If FP-00 is set to 00000, the previously set user password is cleared, and the password protection function is disabled.

FP-01	Restore default settings	0: No operation 1: Restore default settings except motor parameters and accumulation record. 2: Clear records	0
-------	--------------------------	---	---

1. Restore default settings except motor parameters

If FP-01 is set to 1, most function codes are restored to the default settings **except** motor parameters, frequency command resolution (F0-22, fault records, accumulative running time (F7-09), accumulative power-on time (F7-13) and accumulative power consumption (F7-14).

2. Clear records

If FP-01 is set to 2, the fault records, accumulative power-on time (F7-13), accumulative running time (F7-09), and accumulative power consumption (F7-14) are cleared.

FP-04	Parameter modification property	0: Modifiable 1: Not modifiable	0
-------	---------------------------------	------------------------------------	---

It is used to set whether the parameters are modifiable to avoid mal function. If it is set to 0, all parameters are modifiable. If it is set to 1, all parameters can only be viewed.

6. Fault Diagnosis and Solution

6.1 Fault Alarm and Countermeasures

Solar inverter has 35 types of warnings and protection functions. In case of abnormal fault, the protection function will be invoked, the inverter will stop output, and the faulty relay contact of the inverter will start, and the fault code will be displayed on the display panel of the inverter. Before consulting the service department, the user can perform self-check according to the prompts of this chapter, analyze the fault cause and find out t solution. If the fault is caused by the reasons as described in the dotted frame, please consult the agents of inverter or our company directly. Among the 35 types of warning information, Err22 is hardware over current or over voltage signal. In most cases, the hardware over voltage fault will cause Err22 alarm.

Table 7-1 Common faults and solution of the solar inverter

Fault Code	Err01	Fault Type	Inverter unit protection
		1: The output circuit is grounded or short circuited. 2: The connecting cable of the motor is too long. 3: The IGBT overheat. 4: The internal connections become loose. 5: The main control board is faulty. 6: The drive board is faulty. 7: The inverter IGBT is faulty.	1: Eliminate external faults. 2: Install a reactor or an output filter. 3: Check the air filter and the cooling fan. 4: Connect all cables properly. 5: Ask for technical support 6: Ask for technical support 7: Ask for technical support
Fault Code	Err02/Err04	Fault Type	Over current during acceleration/ at constant speed
		1: The output circuit is grounded or short circuited. 2: Motor auto-tuning is not performed. 3: The acceleration time is too short. 4: Manual torque boost or V/F curve is not appropriate. 5: The voltage is too low. 6: The startup operation is performed on the rotating motor. 7: A sudden load is added during acceleration. 8: The solar inverter model is of too small power class.	1: Eliminate external faults. 2: Perform the motor auto- tuning. 3: Increase the acceleration time. 4: Adjust the manual torque boost or V/F curve. 5: Adjust the voltage to normal range. 6: Select rotational speed tracking restart or start the motor after it stops. 7: Remove the added load. 8: Select a solar inverter of higher power class.
Fault Code	Err03	Fault Type	Over current during deceleration
		1: The output circuit is grounded or short circuited. 2: Motor auto-tuning is not performed. 3: The deceleration time is too short. 4: The voltage is too low. 5: A sudden load is added during deceleration. 6: The braking unit and braking resistor are not installed.	1: Eliminate external faults. 2: Perform the motor auto-tuning. 3: Increase the deceleration time. 4: Adjust the voltage to normal range. 5: Remove the added load. 6: Install the braking unit and braking resistor.
Fault Code	Err05/ Err06	Fault Type	Overvoltage during acceleration/deceleration
		1: The input voltage is too high. 2: An external force drives the motor during acceleration. 3: The acceleration/deceleration time is too short. 4: The braking unit and braking resistor are not installed.	1: Adjust the voltage to normal range. 2: Cancel the external force or install a braking resistor. 3: Increase the acceleration/deceleration time. 4: Install the braking unit and braking resistor.
Fault Code	Err07	Fault Type	Overvoltage at constant speed
		1: The input voltage is too high. 2: An external force drives the motor during deceleration.	1: Adjust the voltage to normal range. 2: Cancel the external force or install the braking resistor.

Fault Code	Err08	Fault Type	Control power supply fault
The input voltage is not within the allowable range.		Adjust the input voltage to the allowable range.	
Fault Code	Err09	Fault Type	Low voltage
1: Instantaneous power failure occurs on the input power supply. 2: The solar inverter's input voltage is not within the allowable range. 3: The DC bus voltage is abnormal. 4: The rectifier bridge and buffer resistor are faulty. 5: The drive board is faulty. 6: The main control board is faulty.		1: Reset the fault. 2: Adjust the voltage to normal range. 3: Ask for technical support 4: Ask for technical support 5: Ask for technical support 6: Ask for technical support	
Fault Code	Err10	Fault Type	Solar inverter overload
1: The load is too heavy or locked- rotor occurs on the motor. 2: The solar inverter model is of too small power class.		1: Reduce the load and check the motor and mechanical condition. 2: Select a solar inverter of higher power class.	
Fault Code	Err12	Fault Type	Power input phase loss
1: The 3-phase power input is abnormal. 2: The drive board is faulty. 3: The lightning proof board is faulty. 4: The main control board is faulty.		1: Eliminate external faults. 2: Ask for technical support. 3: Ask for technical support. 4: Ask for technical support.	
Fault Code	Err13	Fault Type	Power output phase loss
1: The cable connecting the solar inverter and the motor is faulty. 2: The solar inverter's 3-phase outputs are unbalanced when the motor is running. 3: The drive board is faulty. 4: The IGBT module is faulty.		1: Eliminate external faults. 2: Check whether the motor 3-phase winding is normal. 3: Ask for technical support. 4: Ask for technical support.	
Fault Code	Err14	Fault Type	IGBT Module overheat
1: The ambient temperature is too high. 2: The air filter is blocked. 3: The fan is damaged. 4: The thermally sensitive resistor of the IGBT module is damaged. 5: The inverter IGBT module is damaged.		1: Lower the ambient temperature. 2: Clean the air filter. 3: Replace the damaged fan. 4: Replace the damaged thermally sensitive resistor. 5: Replace the inverter module.	
Fault Code	Err15	Fault Type	External equipment fault
1: External fault signal is input via DI. 2: External fault signal is input via virtual I/O.		1: Reset the operation. 2: Reset the operation.	
Fault Code	Err16	Fault Type	Communication fault
1: The host computer is in abnormal state. 2: The communication cable is faulty. 3: The communication extension card is set improperly. 4: The communication parameters in group bA are set improperly.		1: Check the cabling of host computer. 2: Check the communication cabling. 3: Set the communication extension card correctly. 4: Set the communication parameters properly.	
Fault Code	Err18	Fault Type	Current detection fault
1: The HALL device is faulty. 2: The drive board is faulty.		1: Replace the faulty HALL device. 2: Replace the faulty drive board.	
Fault Code	Err22	Fault Type	Solar inverter hardware fault
1: Overvoltage exists. 2: Over current exists.		1: Handle based on over voltage. 2: Handle based on over current.	

Appendix I. Modbus communication protocol

The solar inverter provides a RS485 communication interface, and adopts MODBUS communication protocol. Users can carry out centralized monitoring via PC/PLC to get operating requirements. And user can set the running command, modify or read the function codes, the working state or fault information of solar inverter by Modbus communication protocol.

I. About Protocol

This serial communication protocol defines the transmission information and use format in the series communication and it includes master-polling (or broadcasting) format, master coding method and the content includes function code of action, transferring data and error checking. The response of slave is the same structure, and it includes action confirmation, returning the data and error checking etc. If slave takes place the error while it is receiving the information or cannot finish the action demanded by master, it will send one fault signal to master as a response.

II. Application Methods

The solar inverter will be connected into a “Single-master Multi-slave” PC/PLC control net with RS485 bus as the communication slave.

III. Bus structure

1) Hardware interface.


The “485+” and “485-” terminals on solar inverter are the communication interfaces of Modbus

2) Topological mode

It is a “Single-master Multi-slave” system. In this network, every communication machine has a unique slave address. One of them is as “master” (usually PC host machine, PLC and HMI, etc.), actively sends out the communication, to read or write the parameters of slave. Other machines will be used as slave and response to the inquiry/command from master. At one time only one machine can send the data and other machines are in the receiving status. The setup range of slave address is 0 to 247. Zero refers to broadcast communication address. The address of slave must be exclusive in the network.

3) Transmission mode

There provide asynchronous series and half-duplex transmission mode. In the series asynchronous communication, the data is sent out frame by frame in the form of message. According to the Modbus-RTU protocol, when the free time of no transmission in communication data lines is more than the transmission time of 3.5byte, it indicates that a new start of communication frame.

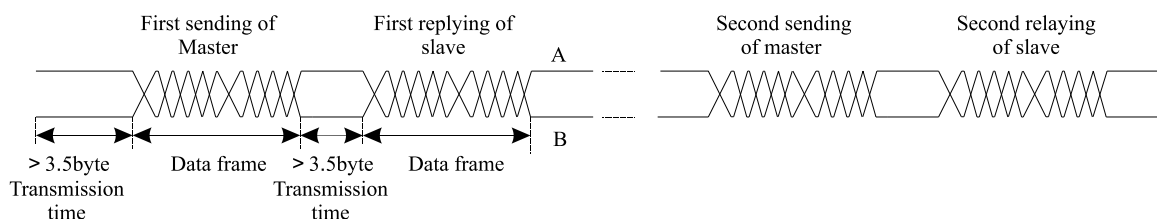


The solar inverter has a built-in Modbus-RTU communication protocol, and is capable to responded to slave “Inquiry/command” or doing actions according to the master’s “Inquiry / Command” and response to the data.




Here, master is personnel computer (PC), industrial machine or programmable logical controller (PLC), and the slave is inverter. Master not only visits some slave, but also sends the broadcast information to all the slaves. For the single master "Inquiry/Command", all of slaves will return a signal that is a response; for the broadcast information provided by master, slave needs not feedback a response to master machine.

Communication data structure


Modbus protocol communication data format of Our inverter is shown as following. The inverter only support the reading and writing of Word type parameters, the corresponding reading operation command is "0x03", the writing operation command is "0x06". The writing and reading operation of byte or bit is not supported.

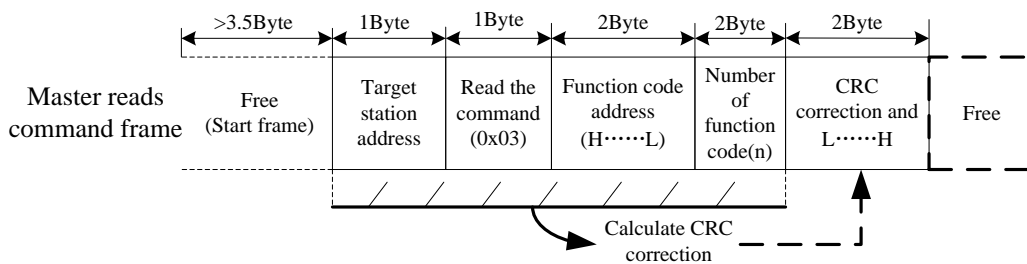

In theory, the host computer can continuously read several function codes once (that is, the maximum value of "n" is 12), but note that not to jump across the last function code in this function group to avoid the wrong reply.

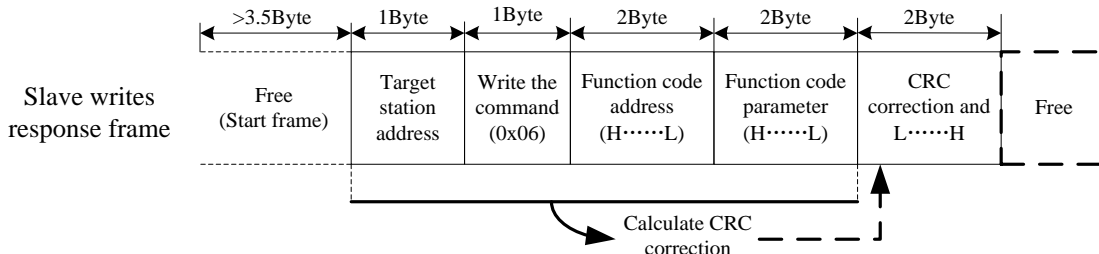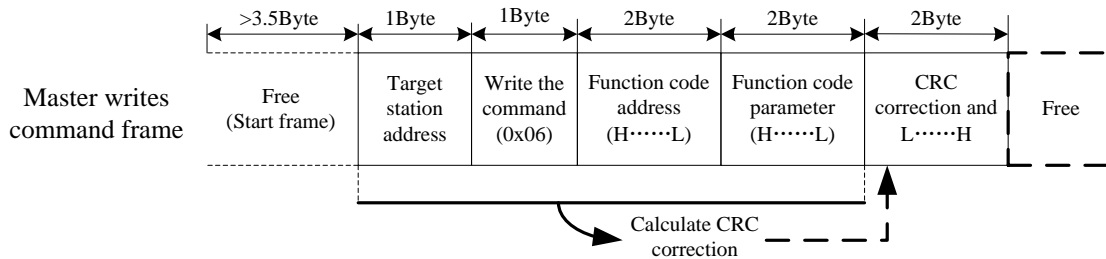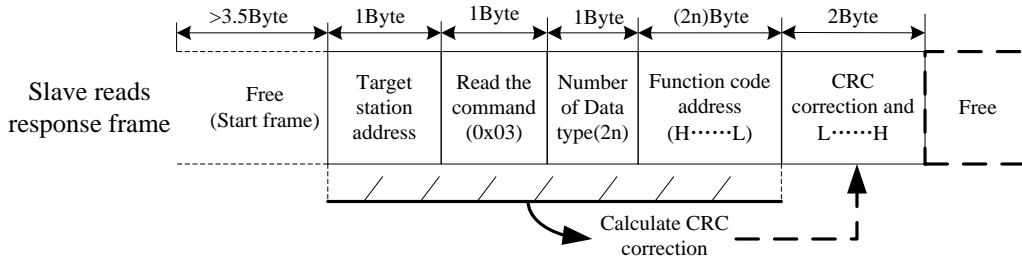

If the wrong communication frame was detected by the salve or other reasons caused the failure of reading and writing, the wrong frame will be replied.

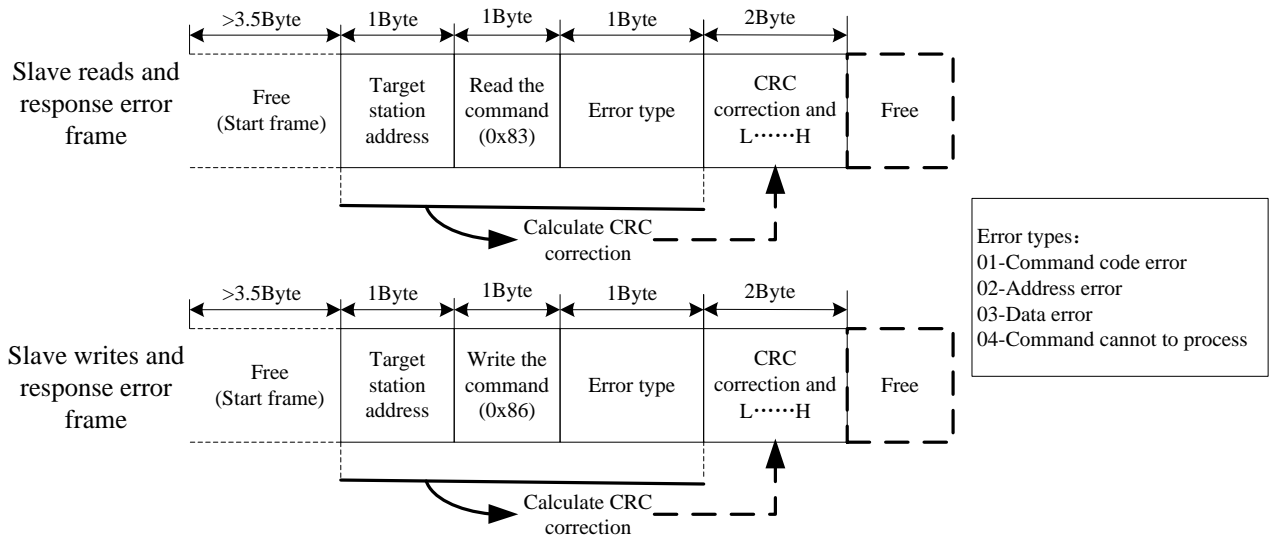

RTU frame format:

Frame start (START)	More than the 3.5- character time
Slave address (ADR)	Communication address:1 to 247(0: broadcast address)
Command code (CMD)	03: Read slave parameters 06: Write slave parameters
Function code address (H)	It indicates the external parameter address of solar inverter in hexadecimal format;
Function code address (L)	There are functional code or non-functional code (such as running state parameter/ running command parameters) type parameters, for details see the address definition. During the transmission, high bit is put in the front, and low bit is at the back.
Number of function code (H)	It indicates the number of function code ready by the frame. If it is "1", then it indicates that it reads one function code. During the transmission, high bit is put in the front, and low bit is at the back.
Number of function code (L)	Only one function code can be modified at one time without the field.
Data (L)	It indicates the replying data or the data waiting to write-in. During the
Data (H)	transmission, high bit is put in the front, and low bit is at the back.
END	3.5- character time

CRC Checking

In RTU mode, messages include an error-checking field that is based on a CRC method. The CRC field checks the contents of the entire message. The CRC field is two bytes, containing a 16-bit binary value. The CRC value is calculated by the transmitting device, which appends the CRC to the message. The receiving device recalculates a CRC during receipt of the message and compares the calculated value to the actual value it received in the CRC field.

If the two values are not equal, that means transmission is incorrect.

The CRC is started by 0xFFFF. Then a process begins of applying successive eight-bit bytes of the message to the current contents of the register. Only the eight bits of data in each character are used for generating the CRC. Start and stop bits, and the parity bit, do not apply to the CRC. During generation of the CRC, each eight-bit character is exclusive ORed with the register contents. Then the result is shifted in the direction of the least significant bit (LSB), with a zero filled into the most significant bit (MSB) position. The LSB is extracted and examined. If the LSB was a 1, the register is then exclusive ORed with a preset, fixed value. If the LSB was a 0, no exclusive OR takes place. This process is repeated until eight shifts have been performed. After the last (eighth) shift, the next

eight-bit byte is exclusive ORed with the register's current value, and the process repeats for eight more shifts as described above. The final contents of the register, after all the bytes of the message have been applied, is the CRC value.

When the CRC is appended to the message, the low-order byte is appended first, followed by the high-order byte.

unsigned int crc_chk_value(unsigned char *data_value,unsigned char length

```

{unsigned int crc_value=0xFFFF;
  int i;
  while(length--)
  {crc_value^=*data_value++;
   for(i=0;i<8;i++)
   {if(crc_value&0x0001)
    {crc_value=(crc_value>>1)^0xa001;
    }
    else
    {
      crc_value=crc_value>>1;
    }
  }
}
return(crc_value);
}

```

Definition of communication parameter address

Read and write function-code parameters (Some functional code is not changed, only for the manufacturer use.)

The group number and mark of function code is the parameter address for indicating the rules.

High level bytes: F0~FF(Group F), A0~AF(Group A), 70~7F(Group U)

Low level bytes: 00 ~ FF

For example: F3-12, address indicates to 0xF30C.

Note: Group U: Read Only parameters, cannot be modified.

Some parameters cannot be changed during operation, some parameters regardless of what kind of state the inverter in, the parameters cannot be changed. Change the function code parameters, pay attention to the scope of the parameters, units, and relative instructions.

Function code group	Communication inquiry address	Inquiry address When Communication modifies RAM
F0~FE	0xF000~ 0xFEFF	0x0000~ 0x0EFF
A0~FC	0xA000~0xACFF	0x4000~0x4CFF
U0	0x7000~ 0x70FF	

Besides, due to EEPROM being stored frequently, it will reduce the lifetime of EEPROM. In the communication mode, and some function codes don't have to be stored as long as change the RAM value.

Stop/start parameters

Parameter address	Parameter description	Parameter address	Parameter description
1000H	Communication set value (-10000 ~ 10000)(Decimal)	1010H	PID setting
1001H	Running frequency	1011H	PID feedback
1002H	DC Bus voltage	1012H	PLC process
1003H	Output voltage	1013H	Pulse input frequency, unit: 0.01KHz

1004H	Output current	1014H	Feedback speed, unit:0.1Hz
1005H	Output power	1015H	Remaining running time
1006H	Output torque	1016H	Voltage before AI1 correction
1007H	Running speed	1017H	Voltage before AI2 correction
1008H	DI input terminal	1018H	Voltage before AI3 correction
1009H	DO output terminal	1019H	Linear speed
100AH	AI1 voltage	101AH	Present power-on time
100BH	AI2 voltage	101BH	Present running time
100CH	AI3 voltage	101CH	Pulse input frequency, unit:1Hz
100DH	Counting value input	101DH	Communication setting value
100EH	Length value input	101EH	Actual feedback speed
100FH	Load speed	101FH	Main frequency X display
		1020H	Auxiliary frequency Y display

Note: Communication setting value is the percentage of relative value, 10000 corresponds to 100%, -10000 corresponds to -100.00%.

Control command input solar inverter: (write in only)

Command word address	Command function
2000H	0001: Forward running
	0002: Reverse running
	0003: Forward jog
	0004: Reverse jog
	0005: Free stop
	0006: Decelerating stop
	0007: Fault reset

Read inverter status: (read only)

Command word address	Command function
3000H	0001: Forward running
	0002: Reverse running
	0003: Stop

Parameter locking password collation: (If the feedback is the 8888H, it indicates the password collation passed)

Password address	Contents of input password
1F00H	*****

Digital output terminal control: (write in only)

Address Of locking password command	Contents of locking password command
-------------------------------------	--------------------------------------

2001H	BIT0: DO1 output control BIT1: DO2 output control BIT2: Relay 1 output control BIT3: Relay 2 output control BIT4: FMR output control BIT5: VDO1 BIT6: VDO2 BIT7: VDO3 BIT8: VDO4 BIT9: VDO5
-------	--

Analog output AO1 control: (write in only)

Command word address	Command function
2002H	0~7FFF indicates 0%~100%

Analog output AO2 control: (write in only)

Command word address	Command function
2003H	0~7FFF indicates 0%~100%

Pulse output control: (write in only)

Command word address	Command function
2004H	0~7FFF indicates 0%~100%

Inverter fault description:

Inverter fault description	Inverter fault information	
8000H	0000: No fault 0001: Reserved 0002: Acceleration over current 0003: Deceleration over current 0004: Constant speed over current 0005: Acceleration over voltage 0006: Deceleration over voltage 0007: Constant speed over voltage 0008: Buffer resistor fault 0009: Low voltage fault 000A: Solar inverter overload 000B: Motor overload 000C: Input phase failure 000D: Output phase failure 000E: IGBT overheat 000F: External equipment fault 0010: Communication fault 0011: Contactor fault 0012: Current detection fault 0013: Motor auto-tuning fault 0014: Encoder/PG fault	0015: EEPROM read-write in fault 0016: Solar inverter hardware fault 0017: Short circuit to ground fault 0018: Reversed 0019: Reversed 001A: Accumulative running time reached 001B: User-defined fault 1 001C: User-defined fault 2 001D: Accumulative power-on time reached 001E: Off load 001F: PID lost during running 0028: fast current limit fault 0029: Motor switchover fault during running 002A: Too large speed deviation 002B: Motor over-speed 002D: Motor overheat 005A: Encode lines setting fault 005B: Not connect to the encoder 005C: Initial location fault 005E: Speed feedback fault

Group Fd Communication parameters

Code	Parameter Name	Setting Range	Default
------	----------------	---------------	---------

Code	Parameter Name	Setting Range	Default
Fd-00	Baud ratio setting	Unit's digit: Modbus baud ratio.	5
		0: 300 BPS 1: 600 BPS 2: 1200 BPS 3: 2400 BPS 4: 4800 BPS	

This parameter is used to set the data transfer rate from host computer and the solar inverter. Please note that baud ratio of the host computer and the inverter should be consistent. Otherwise, communication is impossible. The higher the baud ratio is, the faster the communication is.

Code	Parameter Name	Setting Range	Default
Fd-01	Modbus Data format	0: No check, data format <8,N,2> 1: Even parity check, data format<8,E,1> 2: Odd Parity check, data format<8,O,1> 3: No check, data format <8,N,1>	0

The host computer and solar inverter setup data format must be consistent, otherwise, communication is impossible.

Code	Parameter Name	Setting Range	Default
Fd-02	Broadcast address	0~247 (0: Broadcast address)	1

When the local address is set to 0, that is, broadcast address, it can realize the broadcast function of host computer.

Code	Parameter Name	Setting Range	Default
Fd-03	Modbus response time	0~20 ms	2 ms

Response delay time: it refers to the interval time from the inverter finishes receiving data to sending data to the host machine. If the response time is less than the system processing time, then the response delay time is based on the time delay of the system processing time. If the response delay time is more than the system processing time, after the system processes the data, it should be delayed to wait until the response delay time is reached, then sending data back to host machine.

Code	Parameter Name	Setting Range	Default
Fd-04	Communication timeout	0.0s: invalid 0.1s~60.0s	0.0s

When the function is set to 0.0s, the communication interface timeout parameter is invalid.

When the function code is set to time value, if the interval time between the communication and the next communication is beyond the communication timeout, the system will report communication failure error (Err16). At normal circumstances, it will be set as invalid. If in the continuous communication system, set this parameter, you can monitor the communication status.

Code	Parameter Name	Setting Range	Default
Fd-05	Modbus protocol data transmission format selection	Unit's digit: Modbus protocol. 0: Non-standard Modbus protocol 1: Standard Modbus protocol	1

Fd-05=1: Select standard Modbus protocol.

Fd-05=0: When reading the command, the slave machine return is one byte more than the standard Modbus protocol's, for details, refer to communication data structure of this protocol.

Code	Parameter Name	Setting Range	Default
Fd-06	Communication reading current resolution	0: 0.01A 1: 0.1A	0

It is used to confirm the unit of current value when the communication reads the output current.